

TROUBLESHOOTING ELECTRIC CAN OPENERS

Problem	Solution
Doesn't work at all	1. Refer to Troubleshooting Chart on page 205.
	2. Check switch. If faulty, service switch.
	3. Check motor fuse. If faulty, service fuse.
	4. Check motor. If faulty, replace or seek professional service.
Motor operates slowly as can is opened	1. Check blade. If not sharp, service grindstone or replace blade.
Can drops off can opener	1. Check feed gear. If it wobbles, service gear.
Feed gear turns when can isn't engaged	1. Check feed gear. If dirty, clean feed gear. If worn, service gear.
	2. Check idler gear. If worn, service gear.