

# TROUBLESHOOTING GARBAGE DISPOSERS

Problem	Solution
Doesn't work at all	Refer to Troubleshooting Chart on page 205.
Disposer does not turn	Check flywheel. If jammed, service flywheel.
Disposer leaks water	Check hoses and seals. If loose or worn, tighten or replace.
Disposer turns but doesn't grind up waste	Check impellers. If worn, replace.