

TROUBLESHOOTING TOASTERS

Problem	Solution
Doesn't work at all	Refer to Troubleshooting Chart on page 205.
Carriage lowers but doesn't latch or latches stiffly	Check latch and slide rod. If damaged or obstructed, service the latch assembly.
Bread toasts only on one side	Check elements. If faulty, replace element, chassis, or toaster.
Carriage doesn't pop up and toast burns	Check thermostat calibration. If incorrect, recalibrate thermostat. If thermostat is faulty, replace the thermostat or toaster. Check solenoid switch and solenoid. If faulty, service or replace.
Toast too light or too dark	Check thermostat calibration. If incorrect, recalibrate thermostat.