

# TROUBLESHOOTING TOASTER OVENS

Problem	Solution
Doesn't work at all	1. Refer to Troubleshooting Chart on page 205.
Doesn't work on toaster function and oven function	1. Check main switch. If faulty, service or replace.
	2. Check thermal fuse. If faulty, service or replace.
Toaster function doesn't turn off unless door is open	1. Check solenoid. If faulty, replace.
	2. Check switch. If faulty, replace or seek professional service.
	3. Check thermostat. If faulty, recalibrate (see pages 208–210 on Repairing Toasters).
Toaster oven stays on when door is opened	1. Check main switch. If faulty, service main switch.
Upper or lower elements don't heat	1. Check upper or lower element. If faulty, replace element.
	2. Check thermostat. If faulty, service thermostat or seek professional service.