

TROUBLESHOOTING ALL SMALL APPLIANCES

Problem	Solution
Doesn't work at all	1. Check for power at receptacle. If there is no power, reset breaker or replace fuse.
	2. Check power cord. If faulty, replace.
	3. Check wire connections. If loose or broken, repair or replace wire.
Electrical shock from touching appliance	1. Unplug appliance using insulated tools, then check cord and internal wires. If bare spots or loose ends are touching chassis, repair or replace wires or seek professional service.